

4. Horn Switch

A: REMOVAL

CAUTION:

Before servicing, be sure to read the notes in the “AB” section for proper handling of the driver’s airbag module. <Ref. to AB-4, CAUTION, General Description.>

NOTE:

Horn switch is a unit with the driver’s airbag module.


- 1) Disconnect the ground cable from the battery.
- 2) Remove the driver’s airbag module. <Ref. to AB-14, REMOVAL, Driver’s Airbag Module.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between horn switch terminal and airbag module bracket.

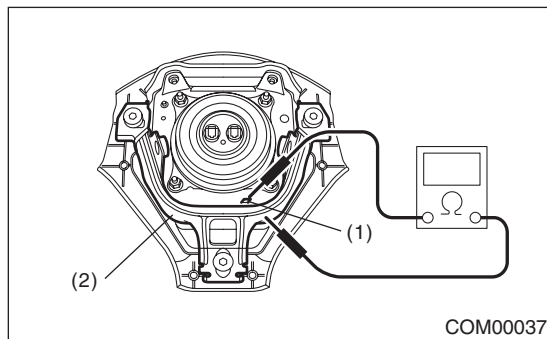

- (1) Airbag module bracket
(2) Horn switch terminal

Switch position	Terminal No.	Resistance
When horn switch is pushed.	Horn switch terminal and airbag module bracket	Less than 1 Ω
When horn switch is not pushed.		1 M Ω or more

Horn Switch

COMMUNICATION SYSTEM

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Power Window System	7
3. Power Window Control Switch	8
4. Front Door Glass	10
5. Front Regulator and Motor Assembly	11
6. Remote Control Mirror System	12
7. Scalp Cap	13
8. Outer Mirror Assembly	14
9. Outer Mirror	15
10. Remote Control Mirror Switch	16
11. Rear Door Glass	17
12. Rear Regulator and Motor Assembly	18
13. Windshield Glass	19
14. Front Quarter Glass	24
15. Rear Gate Glass	25
16. Rear Window Defogger System	27
17. Rear Window Defogger	28
18. Rear Quarter Glass	30
19. Sunroof Glass	32
20. Rearview Mirror	33
21. Wiper Deicer System	34
22. Wiper Deicer Switch	35